


ASC SERIES DUMP PUMP CONSOLE

PARTS LIST AND SERVICE MANUAL

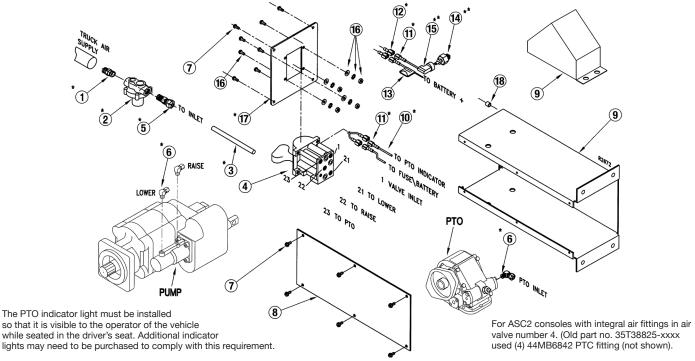

PARTS LIST AND DESCRIPTION

ITEM	QTY	PART NO.	DESCRIPTION		
1*	1	44MB2164	Nipple		
2*	1	31M15759	Pressure Protection Valve		
3*	1	45M44430	Tubing 30 ft.		
Air valve is described in the last 4 characters in the air console kit No.					
4a	1	35T40821-AXDX	PTO Auto KO, center detent		
4b	1	35T40821-MXDX	PTO Man KO, center detent		
4c	1	35T40821-AXDD	PTO Auto KO, center & lower detent		
4d	1	35T40821-MXDD	PTO Man KO, center & lower detent		
4e	1	35T40821-ADDD	PTO Auto KO, 3 Pos. detent		
4f	1	35T40821-MDDD	PTO Man KO, 3 Pos. detent		
5*	1	44MB6844PTC	Tube fitting, push to connect		
6*	3	44MB6942PTC	Tube fitting elbow, push to connect		
7	4	19T36355	Self Tap Screw, AC1-C, D, E, F, G, H, & J		
7	6	19T36355	Self Tap Screw, AC1-A & B		
7	4	19M08075	Self Tap Screw, AC1-A, B, C, D, E, F, G, & H		
Console housings & cover plates dependent upon air console kit no.					
8a & b	1	57T36654	Cover Plate (5 × 12) AC1-A & B		
8c	1	57T38844-8	Cover Plate (3 × 8 in.) AC1-C		
8d	1	57T38844-13	Cover Plate (3 × 13 in.) AC1-D		
8e	1	57T38843-8	Cover Plate (10 × 8 in.) AC1-E		
8f	1	57T38843-13	Cover Plate (10 × 13 in.) AC1-F		
8g	1	57T38843-4	Cover Plate (10 × 4 in.) AC1-G		
8h	1	57T38844-4	Cover Plate (3 × 4 in.) AC1-H		
Not	Note: Console housings will vary in shape and size from actual drawing				

DESCRIPTION				
ITEM	QTY	PART NO.	DESCRIPTION	
9a & b	1	57T36653	Console Housing (5 × 5) ACI-A&B	
9c	1	57T38870-8	Console Housing (3sq × 8 in.) ACI-C	
9d	1	57T38870-13	Console Housing (3sq x 13 in.) ACI-D	
9e	1	57T38882-8	Console Housing (10 × 8 in.) ACI-E	
9f	1	57T38882-13	Console Housing (10 × 13 in.) ACI-F	
9g	1	57T38882-4	Console Housing (10 × 4 in.) ACI-G	
9h	1	57T38870-4	Console Housing (3 × 4 in.) ACI-H	
9j	1	57T39260	Console Housing (Angle Mnt.) ACI-J	
10*	12	37M18000	18 Ga. Wire/ft.	
11*	3	PM514A	Terminal	
12*	3	PM513A	Spade Terminal	
13	1	33T36299	Fuse Assembly	
14**	1	NA	PTO Indicator Switch	
15**	1	NA	Booted Connector	
16	1	36MK1007	Bolt Kit (not used with AC1-C&D)	
Faceplates dependent upon air console kit number				
17a	1	36T38892	Faceplate-centered (5 × 5) AC1-A	
17b	1	36T38891	Faceplate-offset (5 × 5) AC1-B	
17c & d	1	36T38987	Faceplate (3 × 3) AC1-C, D, & X	
17e & f	1	36T38890	Faceplate (3 × 10) AC1-E & F	
18	2	23T38894	Spacer-Nylon, AC1-E, F, G, & H	
N.S.*	2	08470	Cable Tie	
N.S.*	5	1416AC	Grommet	
N.S.	1	36T38893	Decal AC1-J	
* In ASC2 air installation kit 48T40826. (Old ASC1 Air Kit was 48T38898) ** Shipped with PTO				

ASC INSTALLATION INSTRUCTION TIPS

- Install the air shift controller up though the underside of the faceplate.
- Make all electrical and pneumatic connections before installing side panel.
- The side panel will face away from the driver's seat for easy removal.
- Do not tighten faceplate screws completely until side panel is installed and all six mounting screws are tightened.
- Mounting bolts to secure the console to the vehicle cab floor not provided.
- When drilling the faceplate for accessory components, layout pattern using a paper template (not provided) or the actual part to be installed.



for warranties and literature. All rights reserved. © Muncie Power Products, Inc. (2007)